

# Vongon VF-108: User Reference

We recommend watching [this video](#) which is made with the VF-104, but all of the same concepts will apply to the VF-108. Enjoy!



- A** Midi output, connect to Moog MF-108
- B** Power input, 9V Center Positive 1000mA
- C** Next button, selects which parameter the VF-108 is adjusting
- D** Save button, the led indicator will blink when the current preset has been modified. Press save button to store modified preset into memory.
- E** Bank switch, selects which set of presets are currently active on the VF-108
- F** Continuous Rotary Encoder, modifies the value of the active parameter (delay time, feedback, etc)
- G** Parameter Value Indicators, these LEDs indicate the value for the active parameter. Note that delay mode and lfo waveform have special options on the panel short/long and the waveform shapes.
- H** Parameter Selection Indicators, these LEDs indicate which parameter is currently active on the VF-108. The value of this parameter will be displayed on the LEDs circling the knob
- J** Footswitches, The LEDs indicate which preset is currently active (either 'left', 'middle', or 'right').

more info at [www.vongon.com](http://www.vongon.com)

Questions? Email us at [ryan@vongon.com](mailto:ryan@vongon.com)