

SOLARFAZE FIRMWARE UPDATE


VONGON

There is new firmware available for Solarfaze, version 1.1.

Firmware v1.1 Updates:

- Fixed stereo phase alignment in the saturation signal path

How to update SOLARFAZE firmware

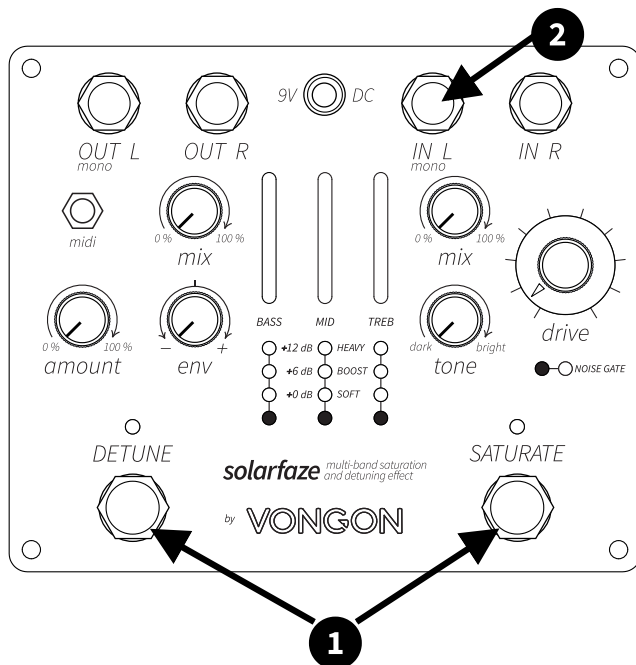

1. Power on SOLARFAZE while **holding down both footswitches (SATURATE and DETUNE)**. The DETUNE and SATURATE LEDs should start to slowly blink, indicating that the pedal is ready to load new firmware.

2. Play the firmware **.WAV file** into the **IN L** jack. You can use a phone, computer, audio interface, etc.

✓ **Loading correctly:** The DETUNE LED will blink quickly for 5–10 seconds, then the SATURATE LED will blink once. This process repeats until the firmware is completely loaded.

✗ **Cannot read file:** Both the DETUNE and SATURATE LEDs will blink quickly. Power off the pedal and try again. Lowering the playback volume often helps the pedal read the file more clearly. If playing from a phone or computer, silence all notification sounds before starting — any audio interruption during playback will cause the update to fail.

When the firmware is loaded, SOLARFAZE will restart automatically.

Please contact support@vongon.com for questions.